

10.3 Drive Roller Lubrication

The following procedure outlines the drive roller lubrication procedure:

1. Power-Off the AAU by removing the power cord from the APC Battery Backup. Follow your site “Lock-Out” procedure to ensure the power cord is not plugged back in until this procedure is completed.
2. Using a standard grease-gun and fitting, apply one full “pump” into the bearing assemblies as shown. (see fig 10.3.1)

